

## Connections to T5.5

NG 900 Harness -'94-'96 OBD-I

### H33-4 Large Black Connector - Pin out

PIN	Wire Color	Function	Notes	ECM PIN
2	Green/Red	PWR to DI, Injectors	From Main Relay	X
5		" +30 PWR"	From Fuse lead to power block	1,48
7		Speed Signal in	On LH 2.4 use pin 1 in small 4 pin connector	39
8			From Switched Power	X
9	■	TACH out from T5	On LH 2.4 use pin 3 in small 4 pin connector	58
11	White	Fuel Relay Trigger (GND)	To "85" on F.Pump Relay	56
12		Main Relay Trigger (GND)	To "85" on Main Relay	31
21		" +15 PWR"	From +15 Coil lead or equivalent	60
22		CHK Engine	On LH 2.4 use pin 4 in small 4 pin connector	32
23		" +15 PWR"	From +15 Coil lead or equivalent	60
24		BCP PWR	From fused power	X
25		/	From Brake Light Switch if wanted	15

#### Notes:

1. "H33-4" is the large 33 pin connector with a red sliding disconnect about 12" from the ECM connector. It is located in the passenger footwell of a NG900.
2. ECM pins listed are the corresponding pins on the main ECM connector.
3. '96.5+ harness are OBDII, some of wiring changed, double check before connecting